


Single-phase Parallel System Wiring Diagram (EU)  
412-900XX-00

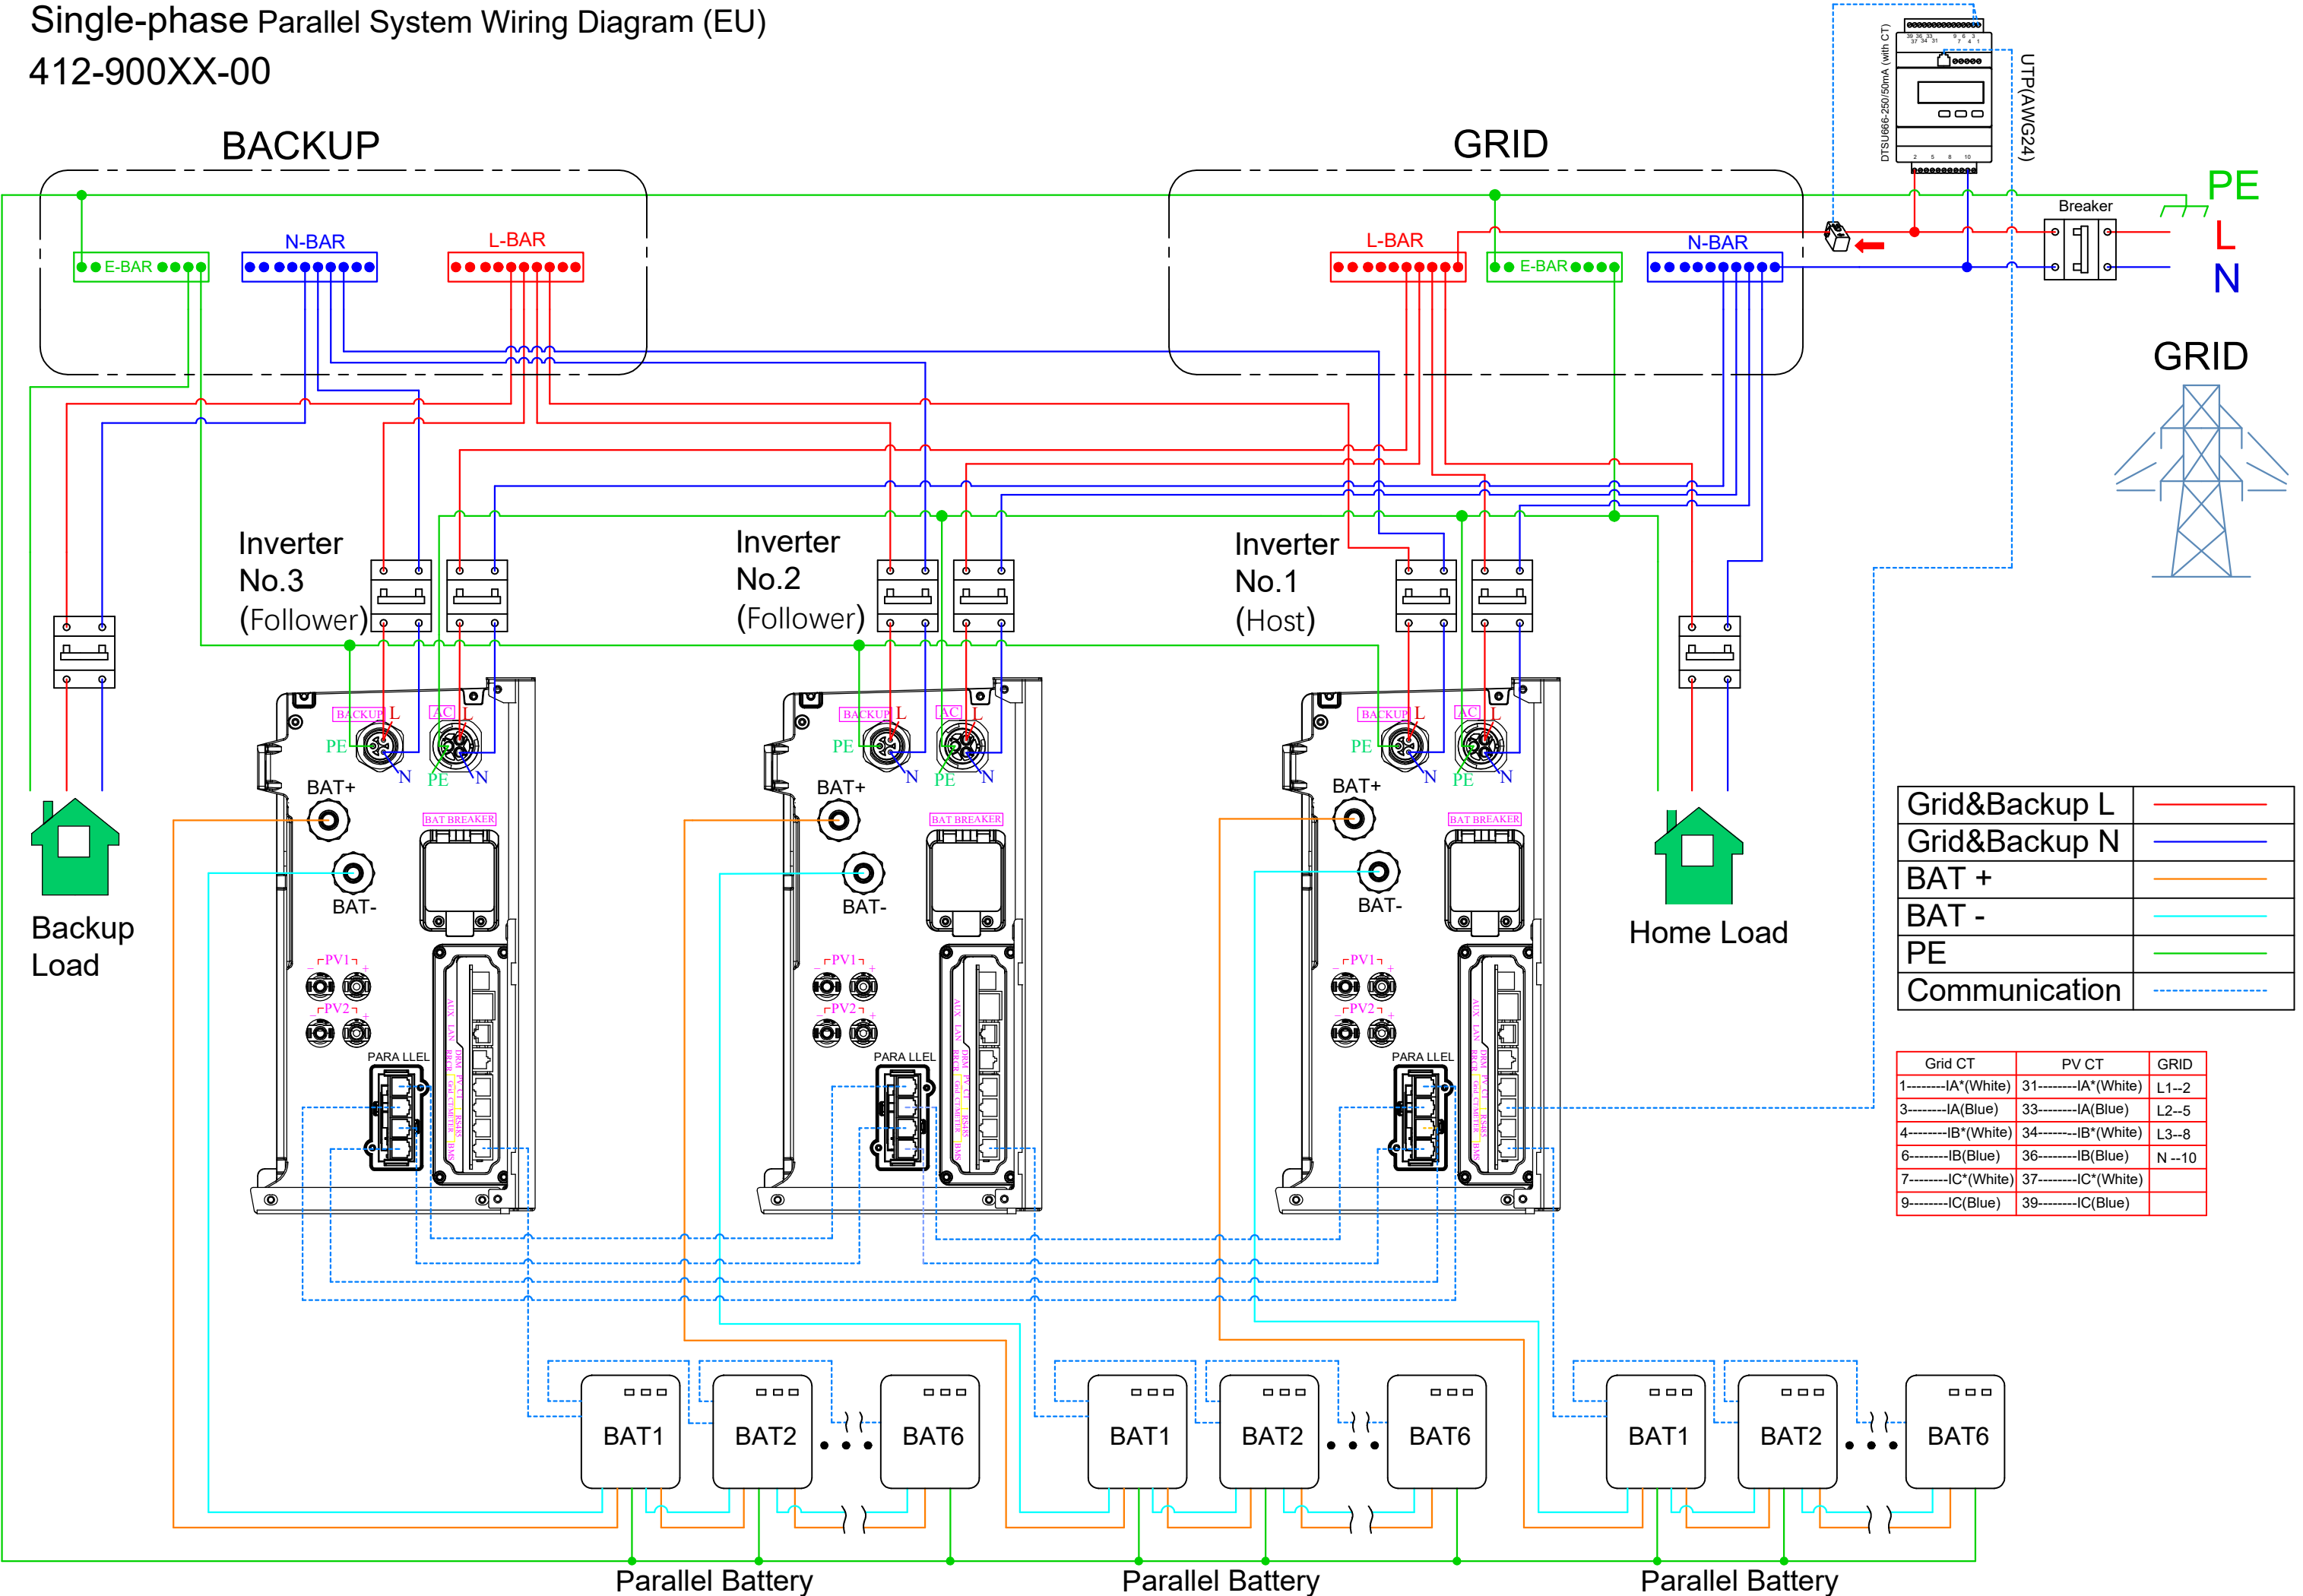


Single-phase Parallel System Wiring Diagram (AU)  
412-900XX-00


**NOTICE**  
(Only for Australia and New Zealand  
installation site)

BACKUP

GRID

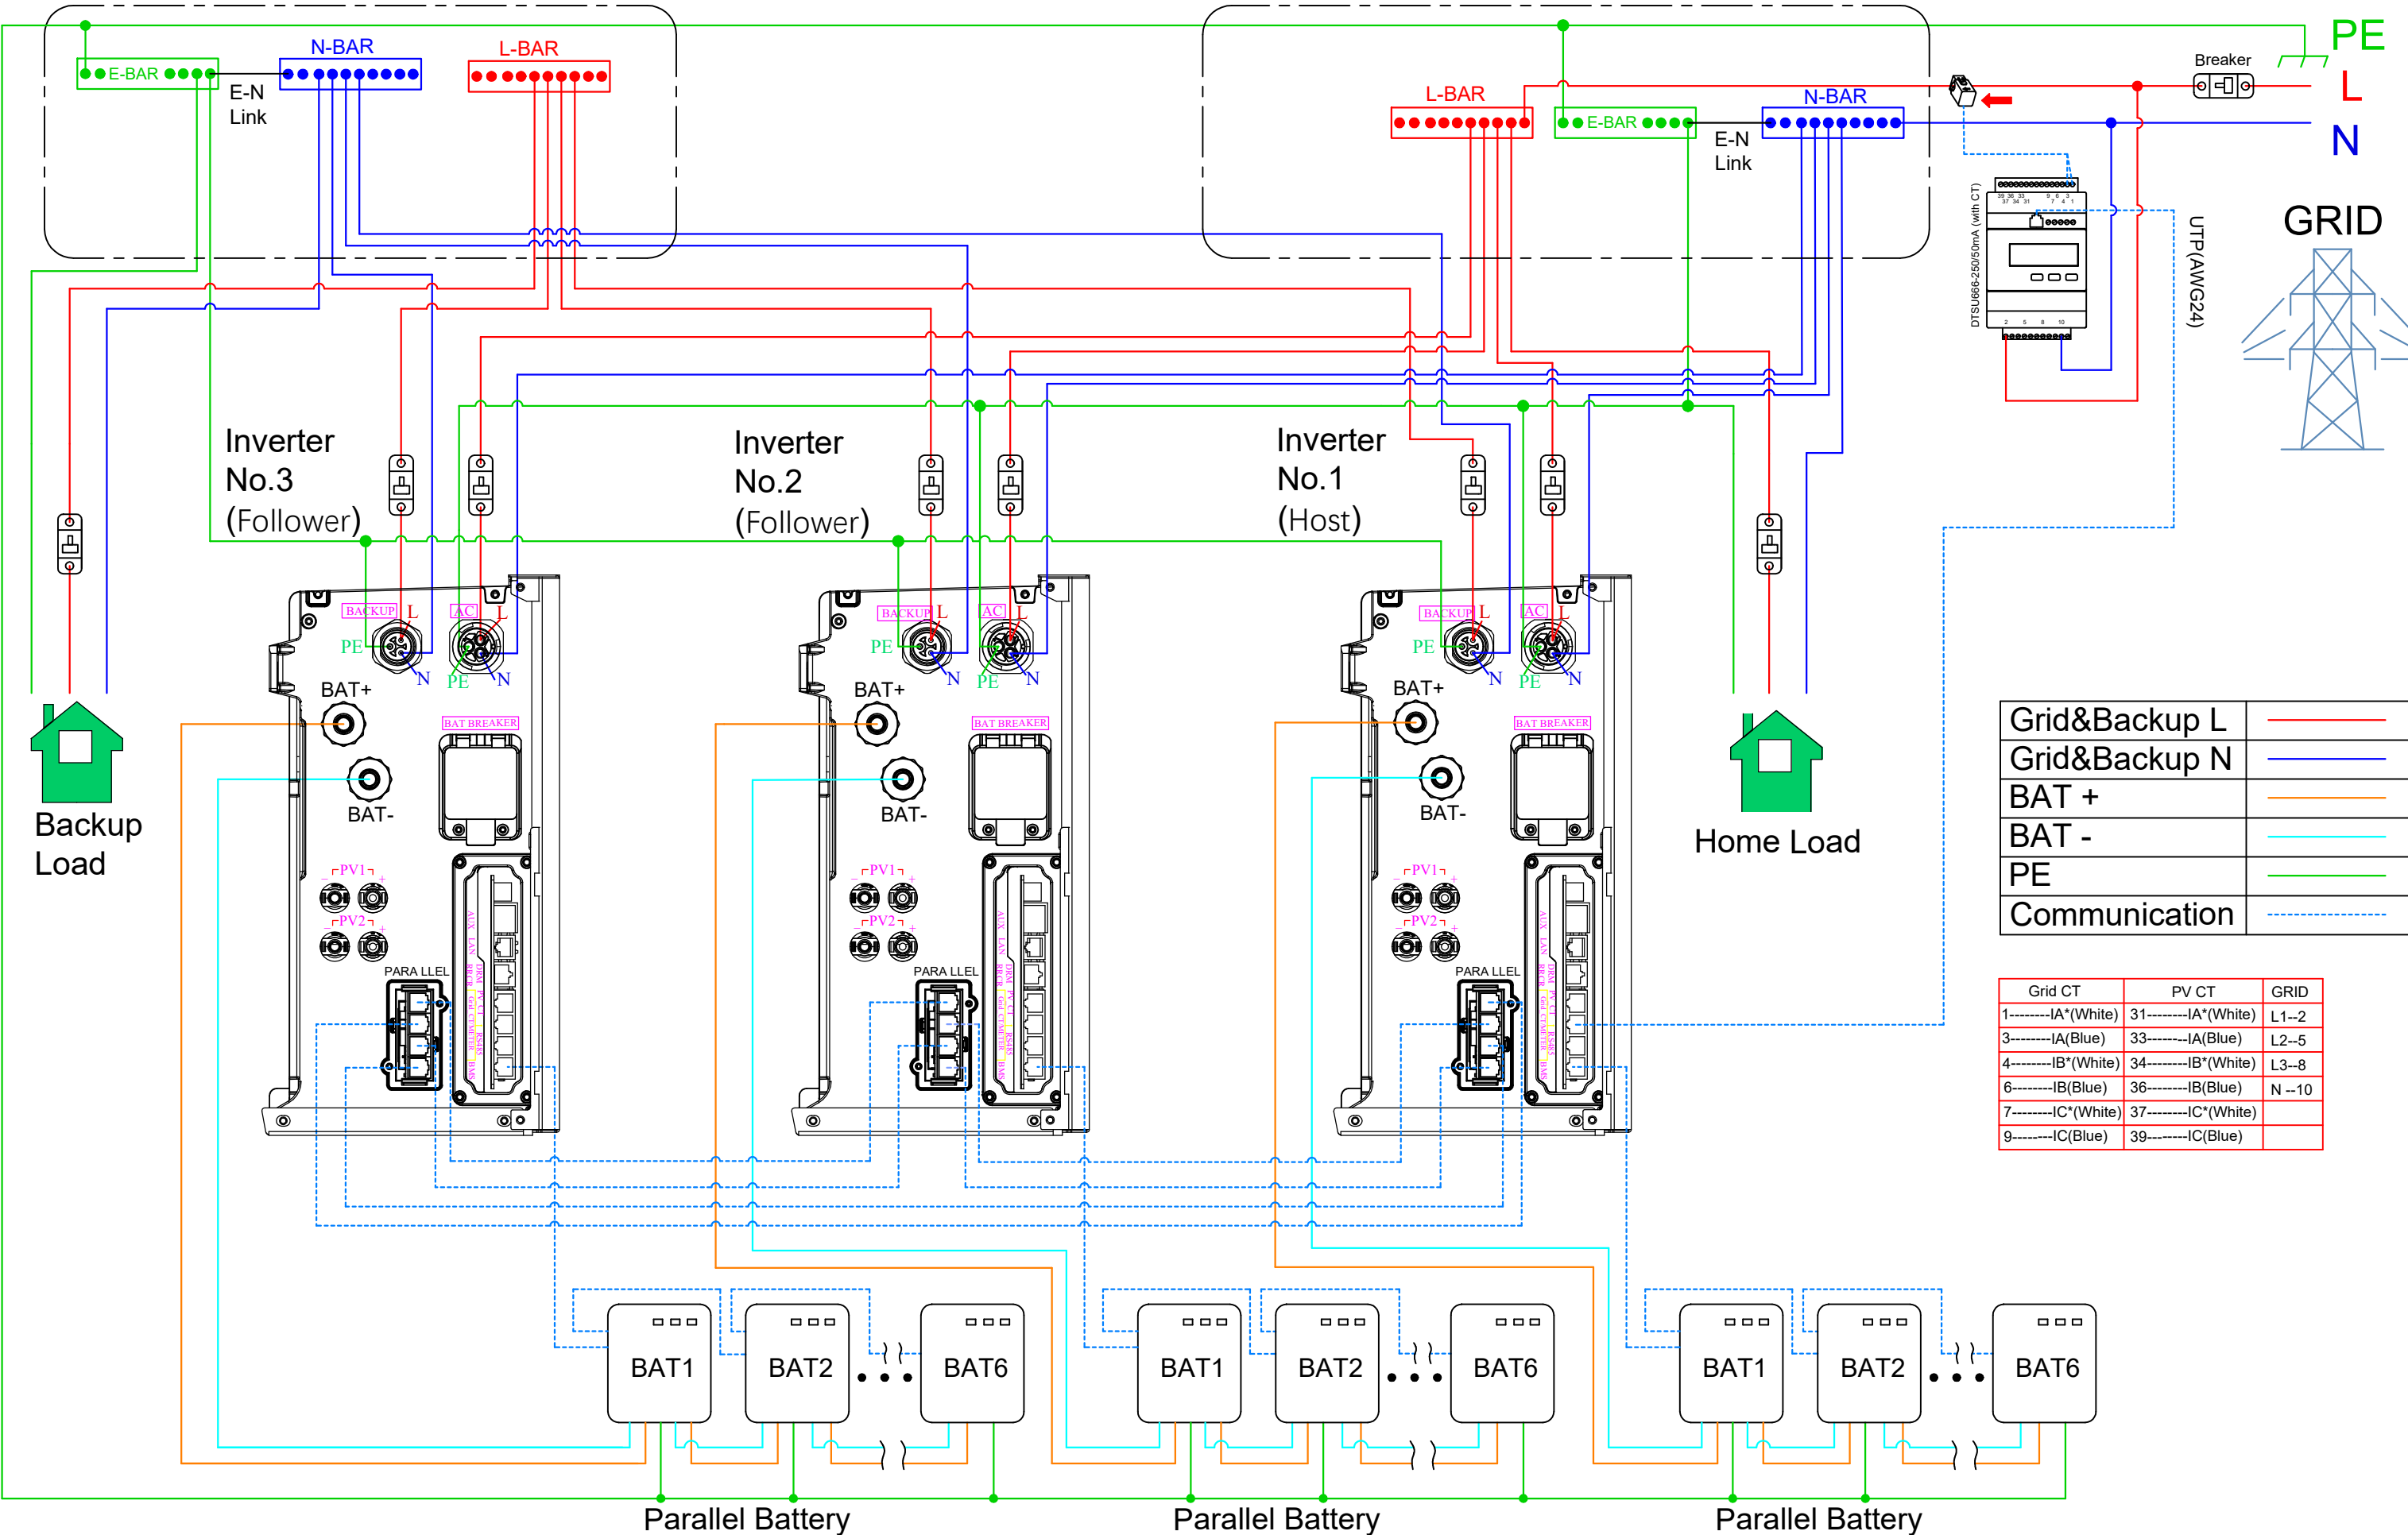

Single-phase Parallel System Wiring Diagram (Off Grid, without Generator)  
412-900XX-00

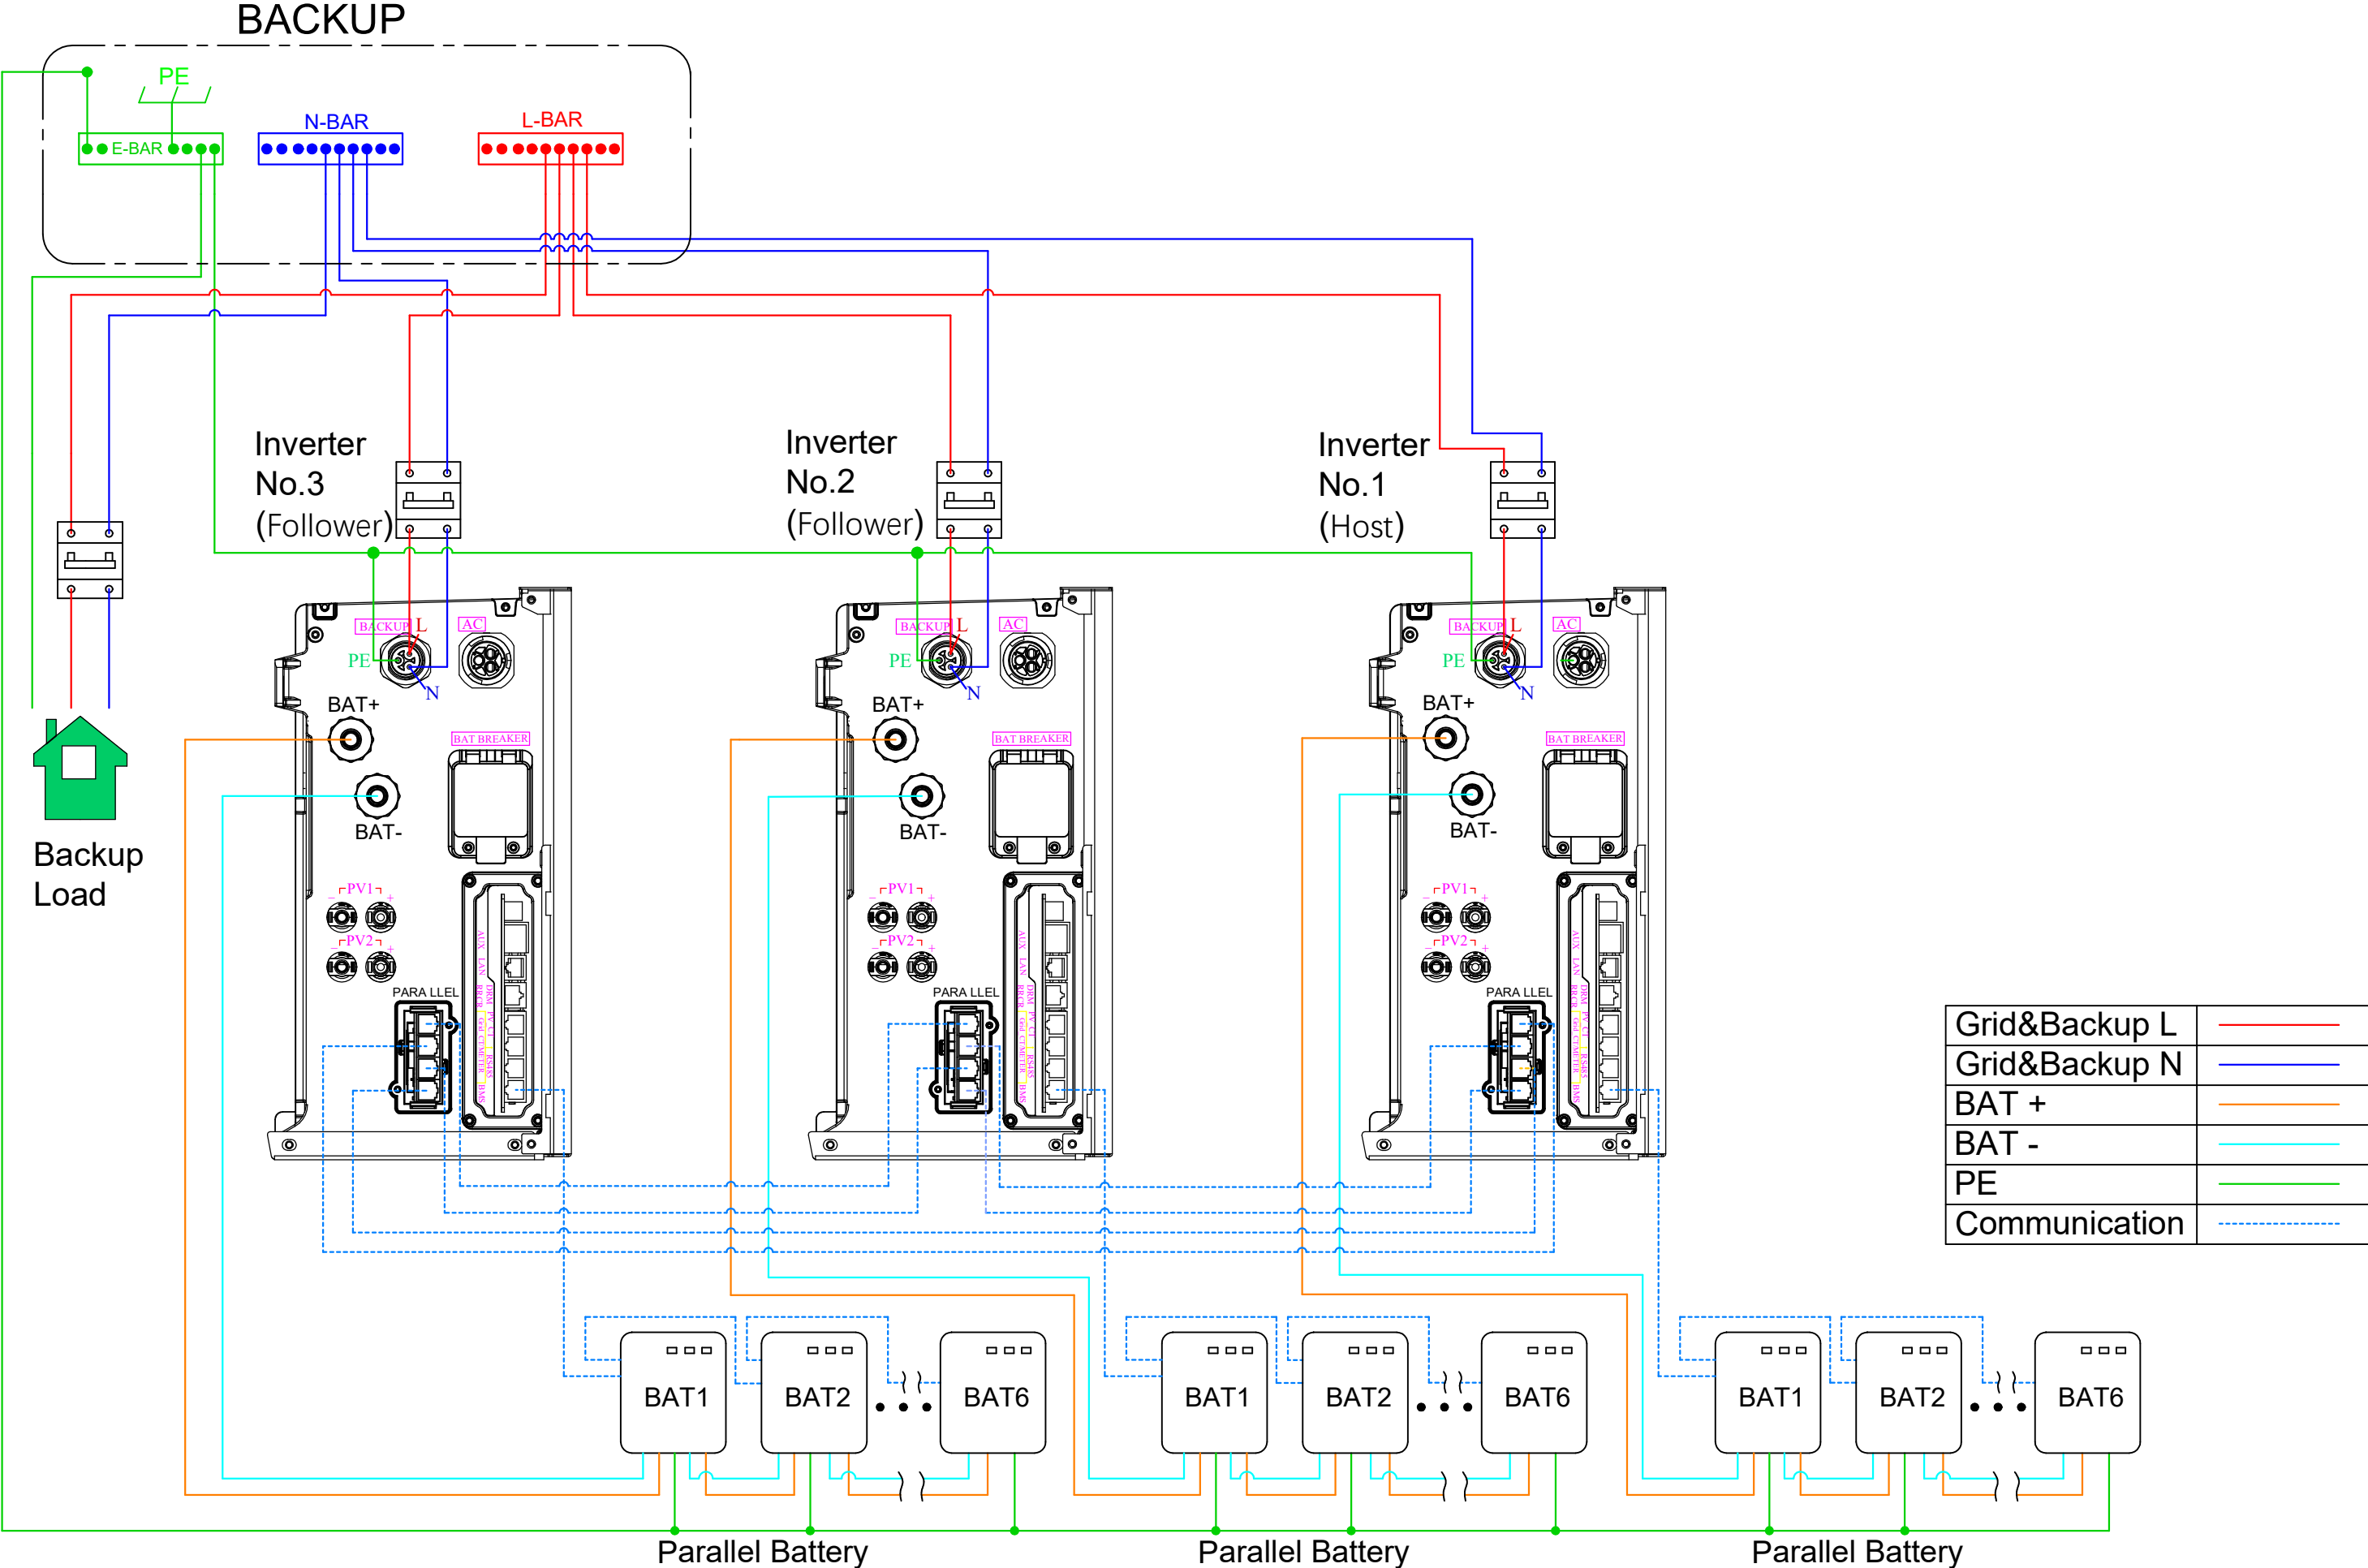

Single-phase Parallel System Wiring Diagram (Off Grid, without Generator)

412-900XX-00

**NOTICE**  
(Only for Australia and New Zealand  
installation site)

