






Export Limit Settings System Wiring Diagram

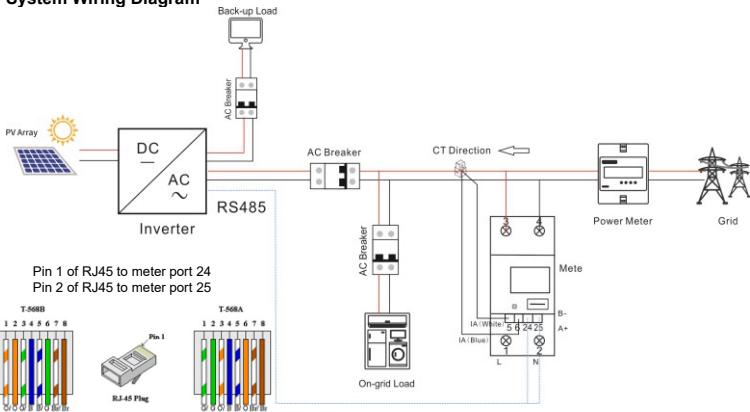

App Settings

Local Connection

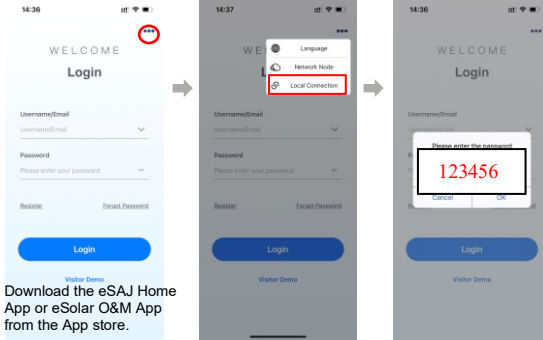

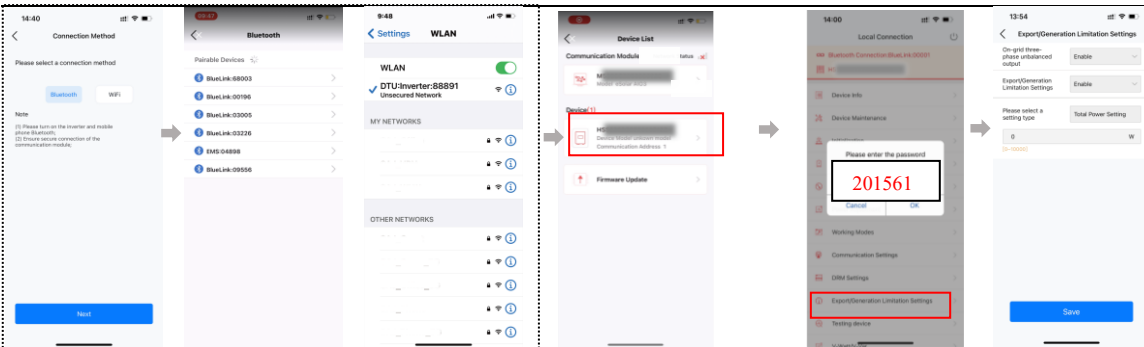

For the AIO3 or 4G module, choose Bluetooth connection. For the Wi-Fi or Wi-Fi-D module, choose Wi-Fi connection.

Bluetooth:
Turn on the Bluetooth on your phone and choose the inverter according to your inverter SN's tail numbers.

Wi-Fi:
Turn on the WLAN on your phone and choose the Wi-Fi name started with **DTU:Inverter**.

There are two methods to control the export limit, the two methods are alternative to each other.
Method 1: Export limitation setting is to control the export electricity to the grid.
Method 2: Generation limit is to control the electricity generated by the inverter.
For more information, refer to the inverter user manual or visit our website: www.saj-electric.com

'Comm error' checklist:

1. Whether the inverter port is plugged into RS485?
2. Is the RJ45 line sequence of pin1 and pin2 reversed?
3. Whether port 24 and 25 on the SEC are wiring reversed?